

Information Sheet 2

PARTS AND ADJUSTMENTS FOR A RADIAL ARM SAW

Completed	Procedure
□	1. While standing at the machine, use the labeled diagram or manual to locate the following: switch, arm, column, elevating crank, yoke, bevel lock, bevel scale, miter scale, miter lock, yoke swivel lock, fence, guard, anti-kickback fingers, and column lock.
□	2. Unlock the column lock and raise the blade 3" above the table.
□	3. Tilt the blade to 45 degrees as indicated on the bevel scale. Return the blade to 0 degrees, and check it with a try square.
□	4. Rotate the yoke 90 degrees to the right, then 90 degrees to the left. Now return it to 0 degrees and lower the blade to 1/8" above table.
□	5. Unlock the miter latch, and swing the blade 20 degrees to the right, then 20 degrees to the left, as indicated by the miter scale. Return the arm to 0 degrees. Check with a try square against the fence.

